HEATED & VENTILATED SEAT SYSTEM

■DESCRIPTION

The heated and ventilated seat system has a heating function and ventilation function, in addition to the blower units in the conventional seat ventilation system. This creates a very comfortable seat.

- The heating function and the ventilation function cannot be operated at the same time.
- For the ventilation function, only air in the cabin is used and hot or cold air is not blown.
- The A/C ECU controls the ventilation function.
- The seat heater controllers in each seat control the heating functions individually.
- This system is optional equipment for the driver and front passenger seats.

■SYSTEM DIAGRAM

The system consists of the seat heater element, two fan units, a switch for the heated & ventilated seats, seat heater controller, and A/C ECU.

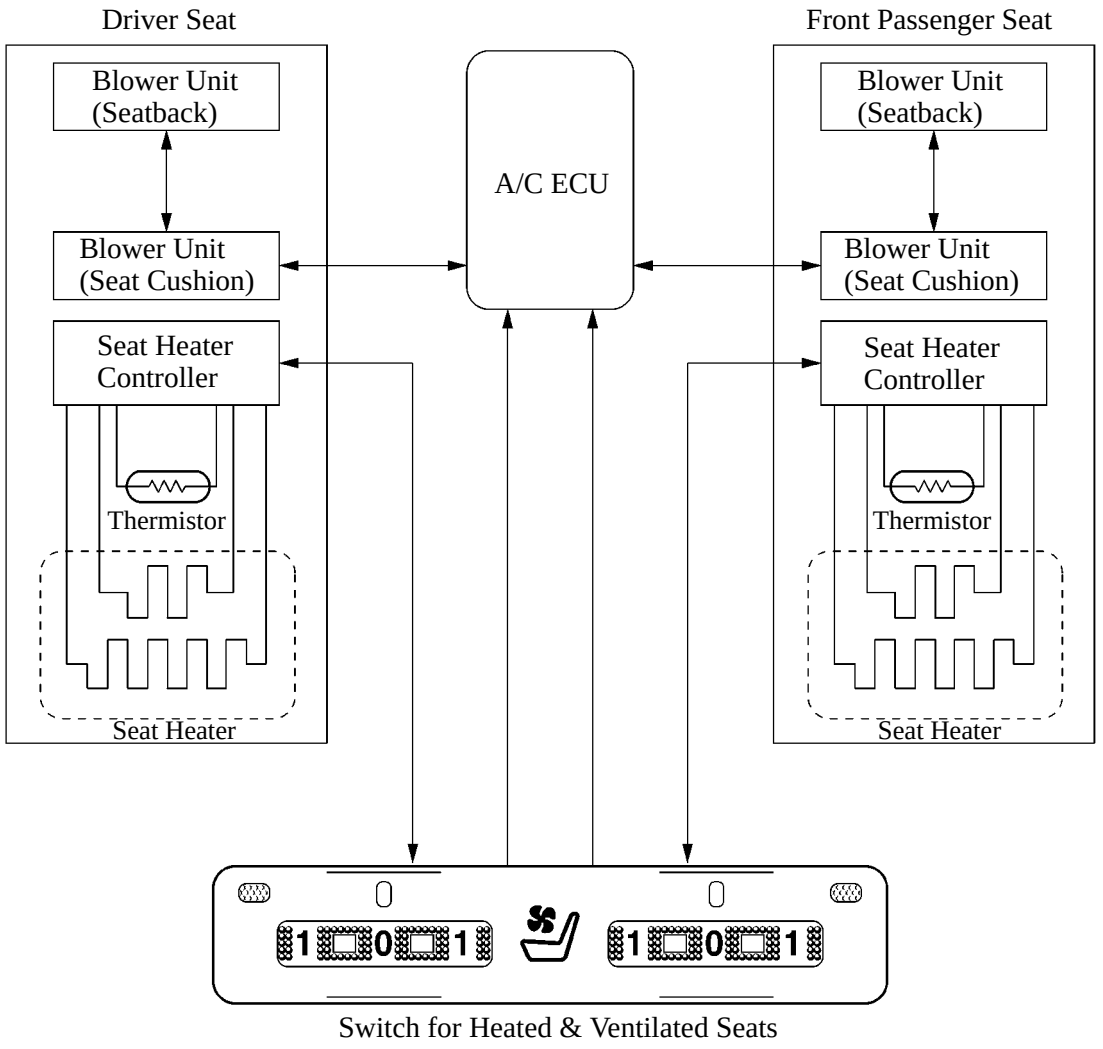

Switch for Heated & Ventilated Seats

01YBE159Y

■LAYOUT OF MAIN COMPONENTS

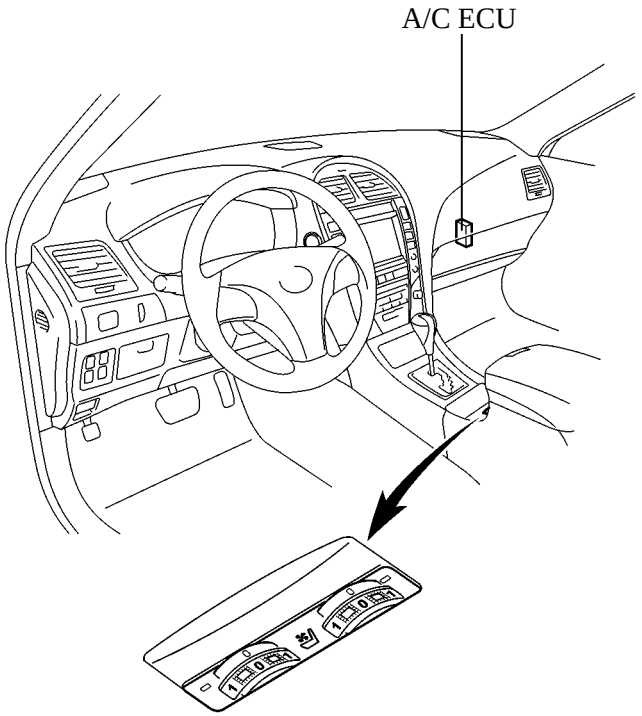

Switch for Heated & Ventilated Seats

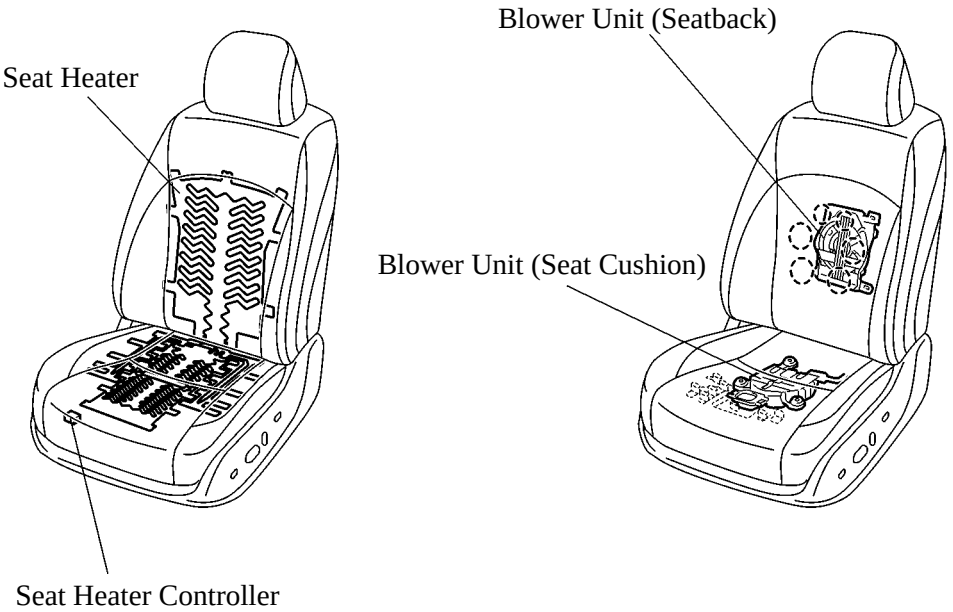

01YBE160Y